
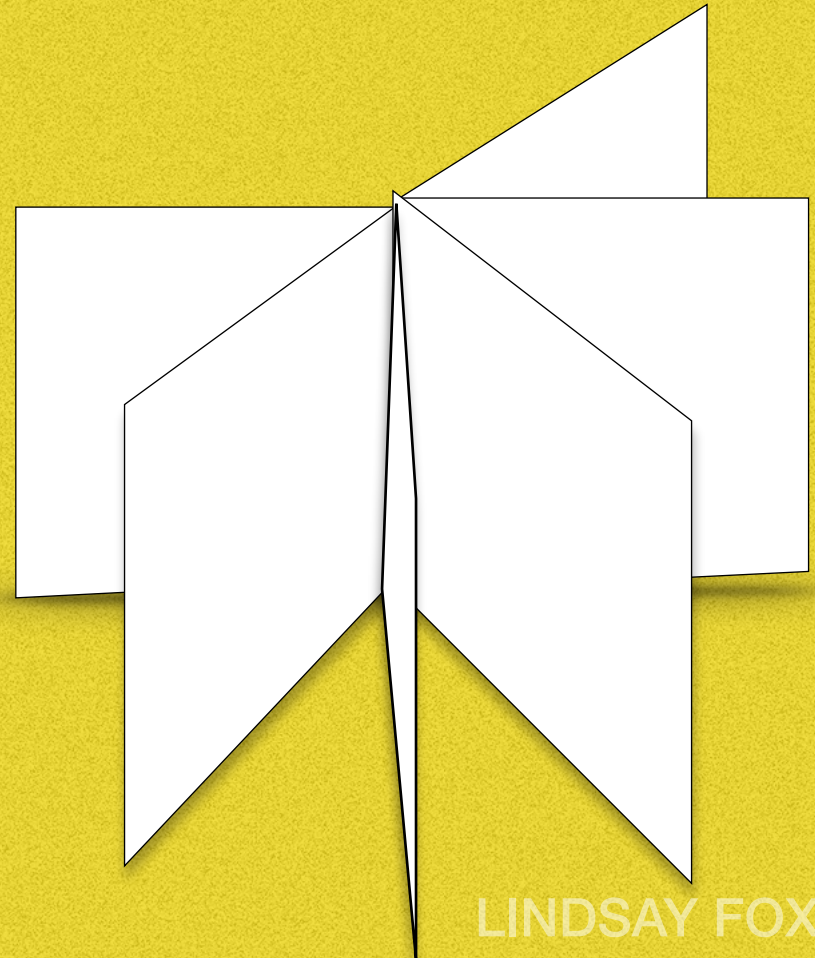


--- cut here
— fold here

- Measure the height of the stand just created and deduct about 1/4" for your cut line length
- Cut out the red squares to fit your PIR sensor cover
- The red fold lines need to be long enough to house all of the electronics out of sight

cut one piece
to cover each
of the 5
openings

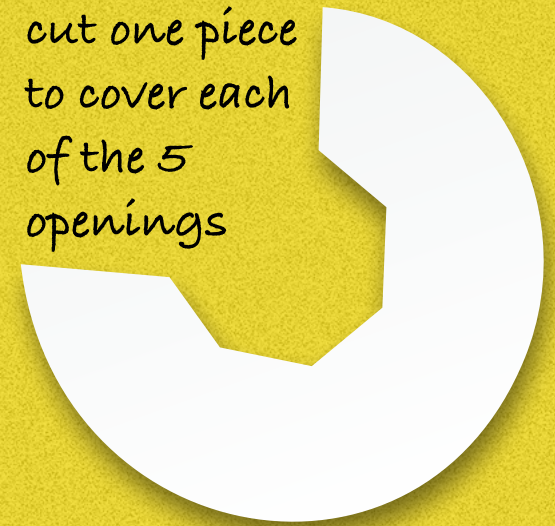

step two

THE PIR OPENINGS & COVER